

POWER

Power On

Press the power key  for 2-3 seconds.

Power Off

Press the power key  until it shows menu Power Off. Select  Power off.

Reboot

Press the power key  until it shows menu Power Off. Select  Reboot.

STATUS BAR ICONS



WiFi



Battery Level



Power
Connected

Navigation Bar

Swipe from the bottom of the screen upward to display the navigation bar.



Minimize
Bar



Recent
Apps



Home



Back

LED LIGHTS

Blue	Blinking - Standby mode Solid - Awaiting Contactless tap
Yellow	Reading card
Green	Battery charged
Red	Battery charging

WIFI SETUP

1. Swipe down from the status bar to display the notification bar.
2. Swipe down from the notification bar to display the settings shortcut.
3. Click on WLAN.
4. Select the desired SSID.
5. Enter the corresponding password.
WiFi will now be connected.

SCREEN

Touch Screen

Drag to toggle to the next screen.
Tap to select the desired icon.

Unlock

Swipe lock symbol up to unlock.

24x7 TECHNICAL SUPPORT

Phone: 866.392.8326 (option 4)
Email: support@nexgo.us